



Connector No2

pin	description	
2 A	HEGO heater	
2 B	UEGO out	
2 C	UEGO in	
2 D	INJ RS	
2 E	<i>Poil switch</i>	
2 F	ETB C - TPS GND	
2 G	INJ FS	
2 H	ESPS / UEGO shield	
2 I	Alternator +	
2 J	INJ RP	
2 K	ECT	
2 L		X
2 M	INJ FP	
2 N	MOP switch	
2 O	(neutral switch)	
2 P	purge solenoid valve actuation	
2 Q	HEGO signal	
2 R	<i>oil level switch</i>	
2 S		X
2 T	Alternator -	
2 U	ESPS out	
2 V	MOP actuation	
2 W	MOP actuation	
2 X	ESPS in	
2 Y	MOP actuation	
2 Z	IGN L/R	
2 AA	IGN L/F	
2 AB	MOP actuation	
2 AC	IGN T/R	
2 AD	IGN T/F	